


HEATER PAD CONNECTION INSTRUCTION

If unit has heater pad option for cold location, please reference below instruction.

120/277VAC

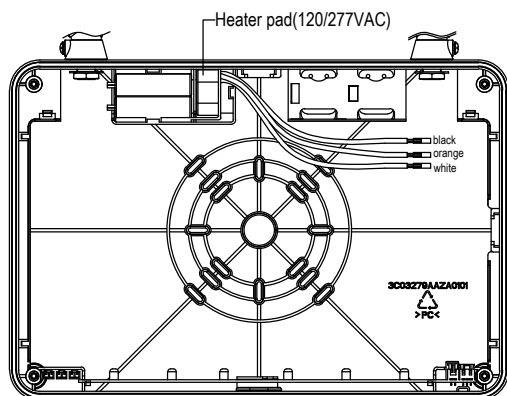


Heater pad
(120/277 VAC)

120VAC supply

Connect neutral wire to white wire from heater pad by wire nut,
connect 120V hot wire to black wire from heater pad by wire nut.
Cap unused orange wire by wire nut.

AC power supply

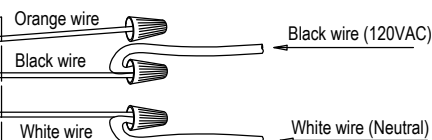


120VAC

Heater pad
(120/277VAC)

277VAC supply

Connect neutral wire to white wire from heater pad by wire nut,
connect 277V hot wire to orange wire from heater pad by wire nut.
Cap unused black wire by wire nut.

AC power supply

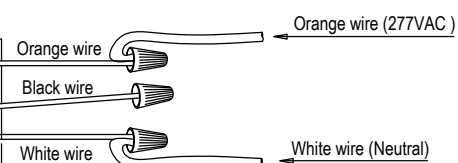

277VAC

Warning: Do not make wrong connection, black wire (for 120V input)
and orange wire (for 277V) must not been used at same time.