

INSTALLATION & OPERATION INSTRUCTIONS

GENERAL

All electrical connections must be in accordance with local and National Electrical Code

(N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

CAUTION – Risk of electrical shock. Turning power off using fan switch is not sufficient to prevent electrical shock. Be sure to turn off the main power at the circuit breaker before starting installation or removal of the previous fixture.

Unpack the box- Remove the fixture and hardware bag from packing box and check everything you need is included .

Package contents:

- . Light Kit Fixture.....1pc
- . Glass Shade.....1pc
- . Hardware Bag : Wire Nut 3pcs, Wood Tassel...1pc

Assembly and Installation

1. Remove the switch housing cover (Fig.C) or switch housing (Fig.B) from ceiling fan by unscrewing three screws (9).
2. Remove the thread plug (13) from center hold of the cover. You may discard this plug or keep it for future use.
3. Thread wires from light kit through center hole in switch housing cover (6).
4. Attach the cover to light kit fitter(14), using spring washer (8) and hex nut(7) to tighten onto thread nipple (12) securely.

Be sure it is secured enough to prevent screws from vibrating loose.

5. Locate two wires in the switch housing with tag marked FOR LIGHT (one BLUE & one WHITE).
6. Make wire connections(Fig.D). Connect BLUE wire (3)to BLACK wire (5) from light kit, connect WHITE wire(10) to white wire (11) from light kit by using wire nuts(4).
7. After completing wires connection, carefully tuck wires back into fan switch housing.
8. Install the switch housing cover with light kit fitter to fan switch housing (1) and secure tightly with three side screws (9).
9. For model# 1RP82- Install LED Lamps into bulb sockets. DO NOT exceed max. watt as indicated.
10. For model# 1RP31(LED)-No light bulbs required to replace.
11. Be sure to feed the fan pull chain (17) through the nut on the light kit fitter.
12. Loosen three thumb screws (15) and lift glass shade into place and secure screws firmly. **DO NOT over-tighten screws as the pressure may eventually crack the glass.**
13. Attach the wood tassel to light kit pull chain (16).
14. Installation is completed, turn on main power and operate your fan and light kit.

CEILING FAN LIGHT KITS Model# 1RP31(LED),1RP82 Non-Dimmable, Input Volt.120V AC 60Hz

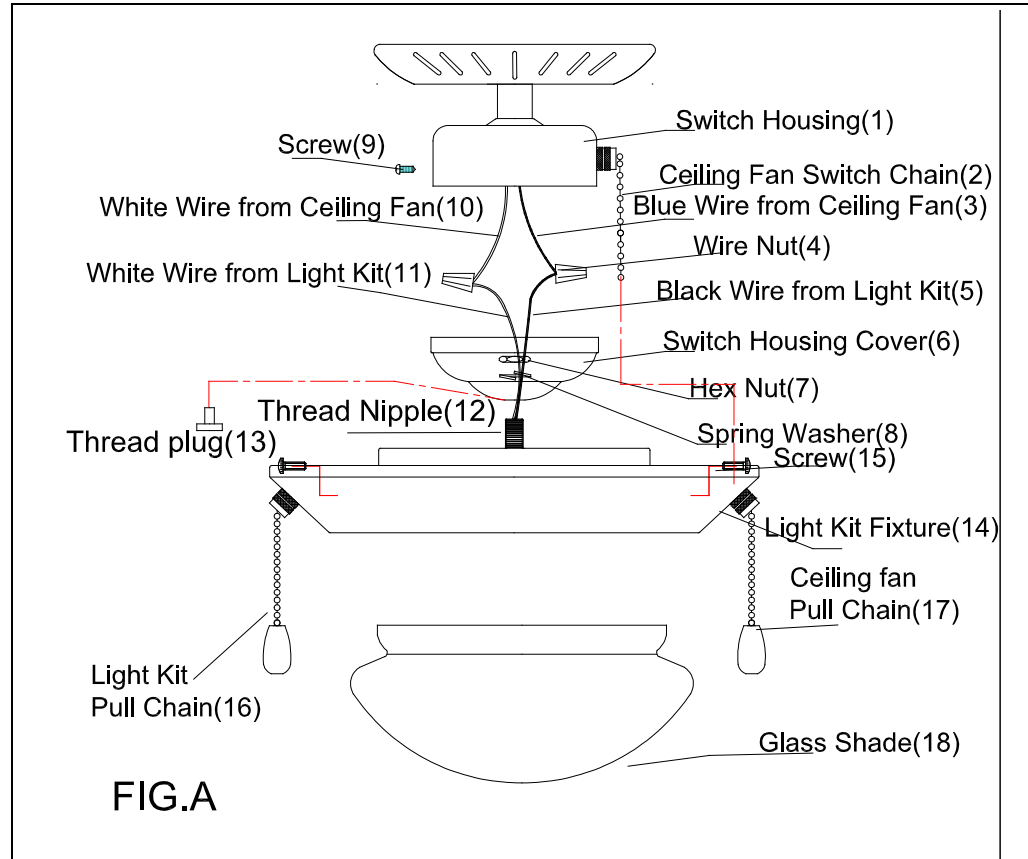 


FIG.A

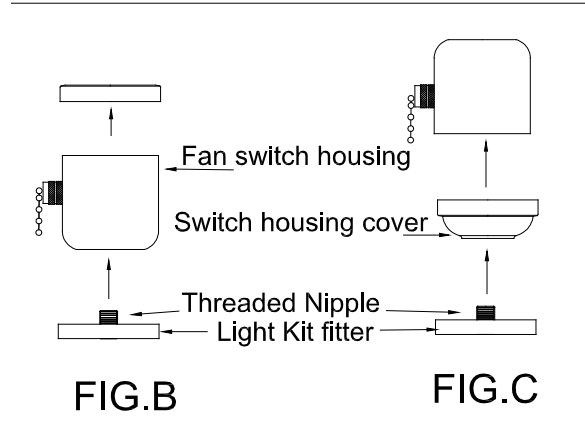 


FIG.B

FIG.C

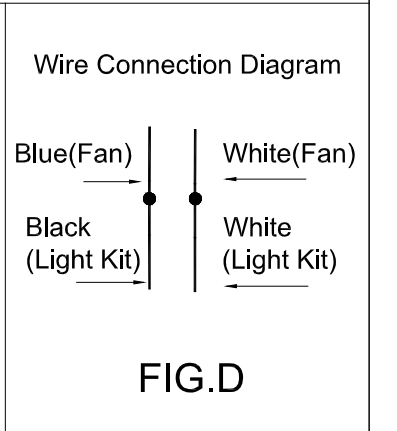 


FIG.D